

I.Tips

►1. Quick guide of Setting, please read**"IV.Settings"**.

►2. It is recommended to read this manual carefully before using the camera.

II.Product Features

►1.Real-Time Monitoring

You can watch real-time video online while you are away.

►2.Alarm

When a moving object is detected within the recording range, the camera will start recording and send an alarm through the APP on the mobile device.

►3.TF Storage

If you insert a TF card, the camera will automatically save the surveillance video; 8GB memory allows two days of recording, and 128GB memory allows up to a month of recording.

►4.Loop Recording

When the memory is full, the latest recording file will automatically overwrite the oldest.

►5.Cloud Storage

If you worry about your camera being stolen or the files in the TF card being damaged, you can use paid cloud storage (provided and charged by a third party).

►6.AI Body Shape Recognition

The alarm is activated only when there is human activity to facility alarming accuracy(reducing false alarm caused by wind or animals; AI body shape recognition services are provided and charged by a third party).

►7.How To Play The Video

The video stored on the TF card can be viewed on the computer through the card reader, or directly through the mobile phone, and the video stored on the cloud storage can be directly downloaded and viewed through the mobile phone.

III.Read Before Use

1. Format the TF card before use. Please note that this operation will delete all data in the card. Make sure to back up all data before formatting. The camera supports C10 TF cards of 8GB—128GB capacity.

2. You can watch real-time video without inserting a TF card, but the video cannot be saved in the camera or played back.

3. The camera does not have a built-in battery. Please connect it to a power bank or household power supply before using. Normal use requires 5V/1A voltage, maximum supports 5V/2A.

4. The camera supports 2.4G WiFi connection but does not support 5G or SIM Wi-Fi band connection.

⚠5. Do not cover or wrap the camera while using, as this will affect the normal heat dissipation. The camera needs to continuously transmit signals to connect to the Internet, so temperature rise is normal. The camera has undergone a long-term aging test before leaving the factory to ensure good performance. This camera can only be used with power bank, power adapter and car charger.

6. Time will be synchronized to local time automatically and there is no need to set.

7. (Please) do not use this device for illegal purposes.

IV.Settings

1.Download The Monitoring APP



Search from the APP store: "V380 Pro"



Scan the QR code above to download and install.

2.Short—range mode

(point-to-point connection of camera and mobile phone)

If you need to save the video, please insert a formatted memory card into the card slot.

Connect Power Supply

Connect the power supply, and wait about one minute until the camera indicator turns red. If the red indicator and the blue indicator stay on at the same time for 3 minutes, please reset the camera first.

Phone Settings


Tap "Settings" on the mobile phone and then perform Wi-Fi settings. Find the Wi-Fi signal beginning with **MV**, and then tap Connect. Wait until the Wi-Fi symbol appears on the top of the mobile phone, which indicates that the connection is successful. Then, tap Next.



Open APP V380Pro



Step 1 please tap "Keep Trying WLAN".

Step 2 please tap "+" to add a camera.

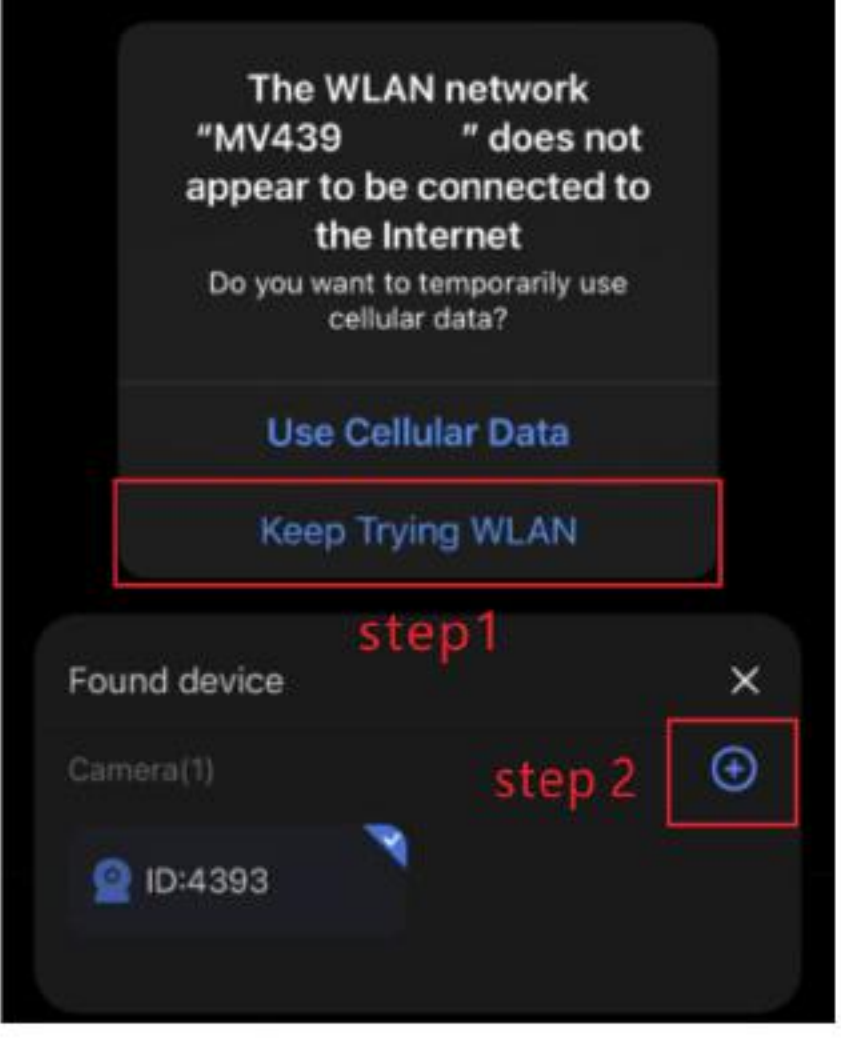

User name and password

Tap on the screen to set the user name and password (as shown below). After setting, you can watch video on the mobile phone.

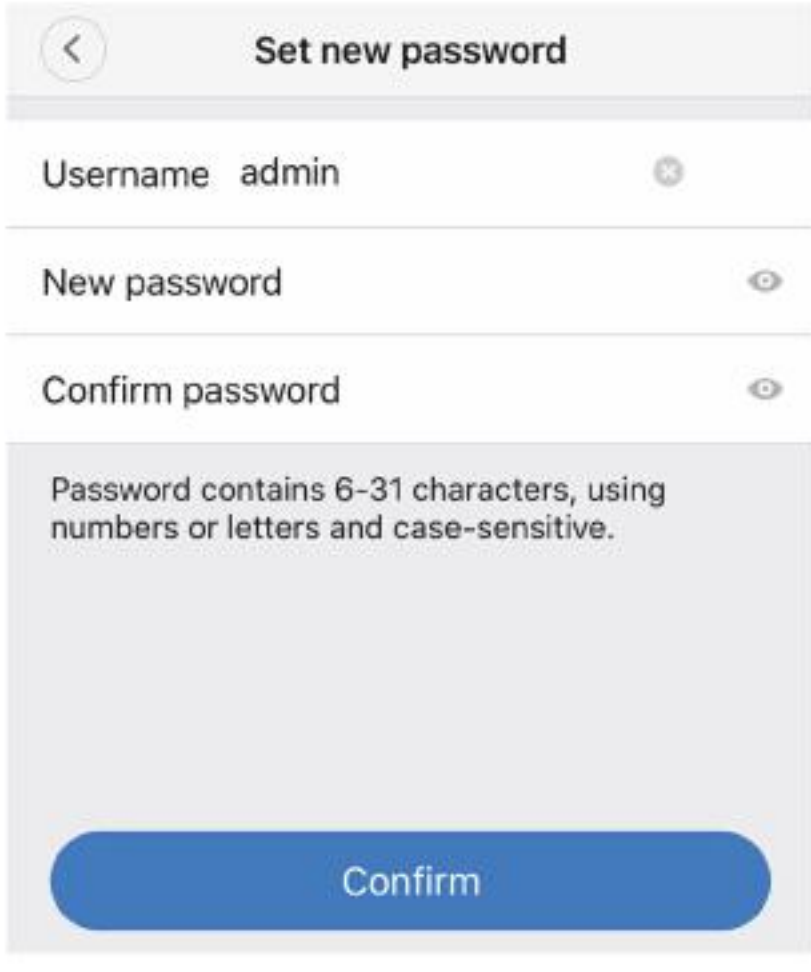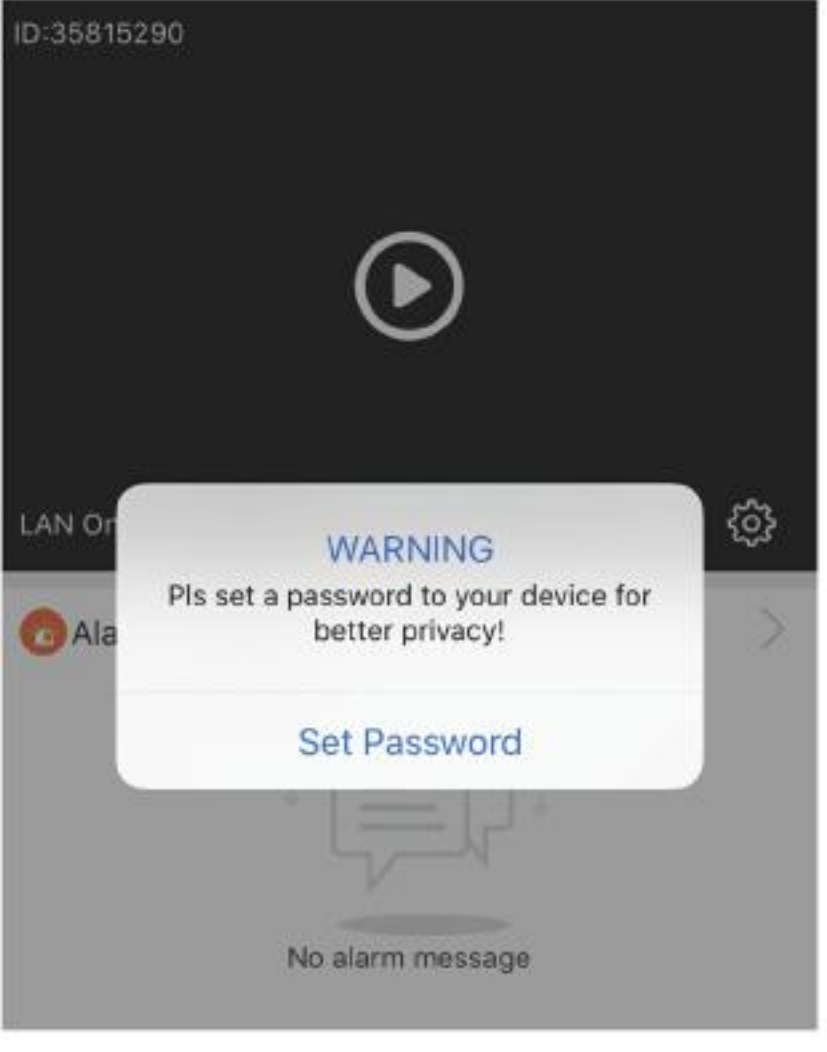

Note

1. If the signal from the camera is not found among the Wi-Fi signals in point-to-point connection when the red indicator is on, you can reset the camera and try again.

2. The distance between the mobile phone and the camera should be less than 10m, and there should be no obstacles such as walls, wardrobes and wooden boards between them.

3. If there is no image, please swipe to refresh the screen and try again.

4. Remember the username and password. If you forget the username or password, you can only reset the camera.


3.Remote mode

(achieve remote monitoring by connecting to the router Wi-Fi)


Note:

To ensure signal stability, the distance between the camera and the router should not exceed 10m.


(1) Tap the "Settings" symbol in the lower right corner.

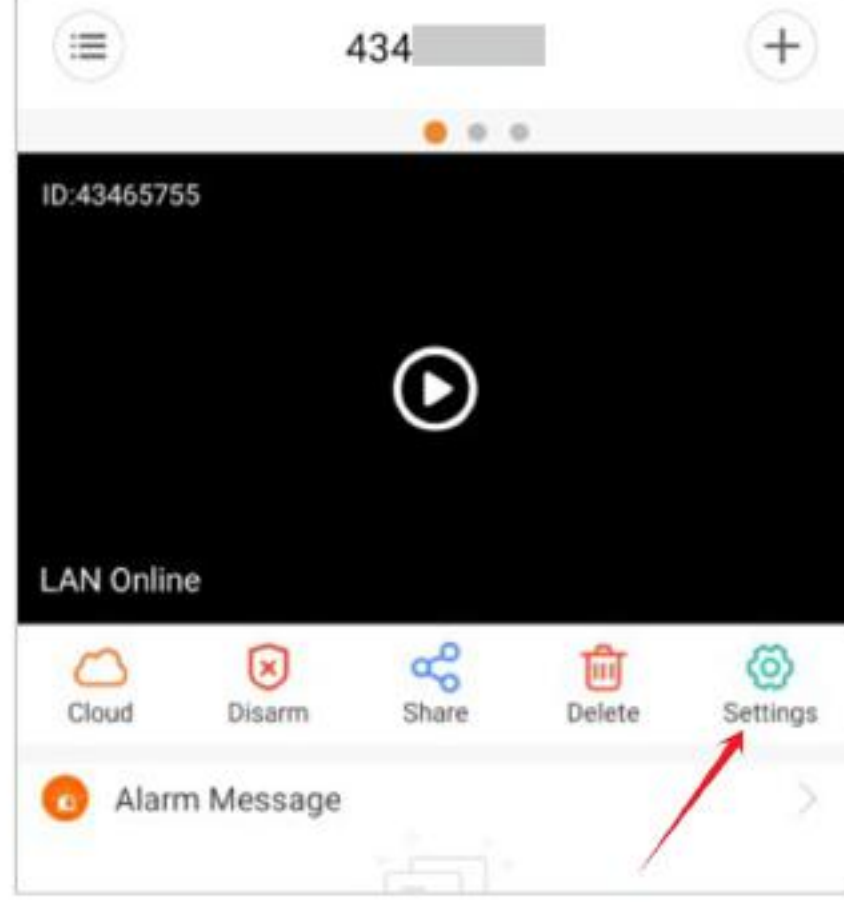

(2) Select "Network".

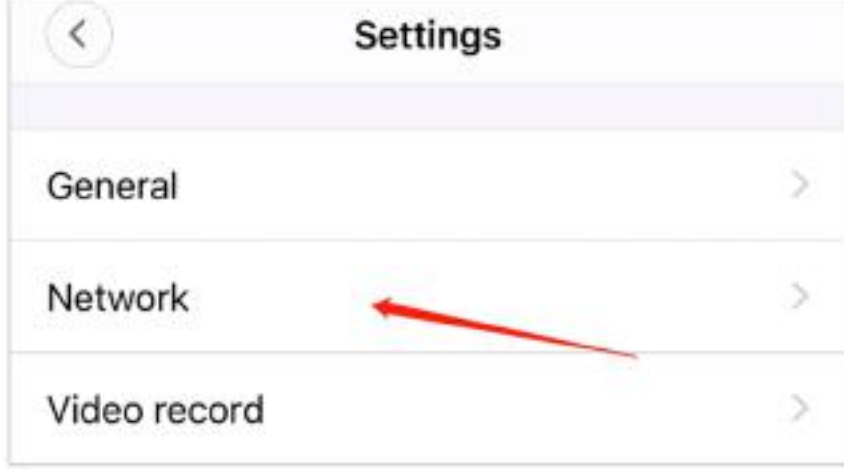


(3) Tap "WiFi station mode".

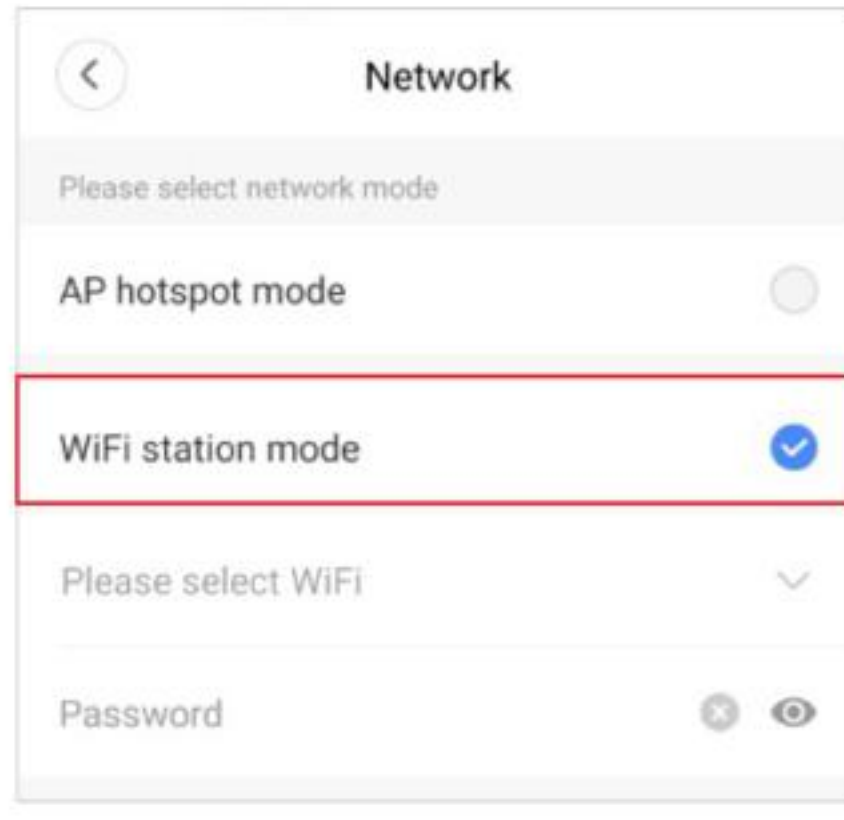

(4) Please select WiFi you want to use.

(Note: Wi-Fi name must be composed of numbers and letters, no spaces and special symbols such as &, =, \ and .)

(5) After entering the Wi-Fi password, wait for the camera to connect to the Wi-Fi network. When the connection is successful, the camera indicator turns blue and the list shows that the device is online. You can monitor anytime, anywhere.

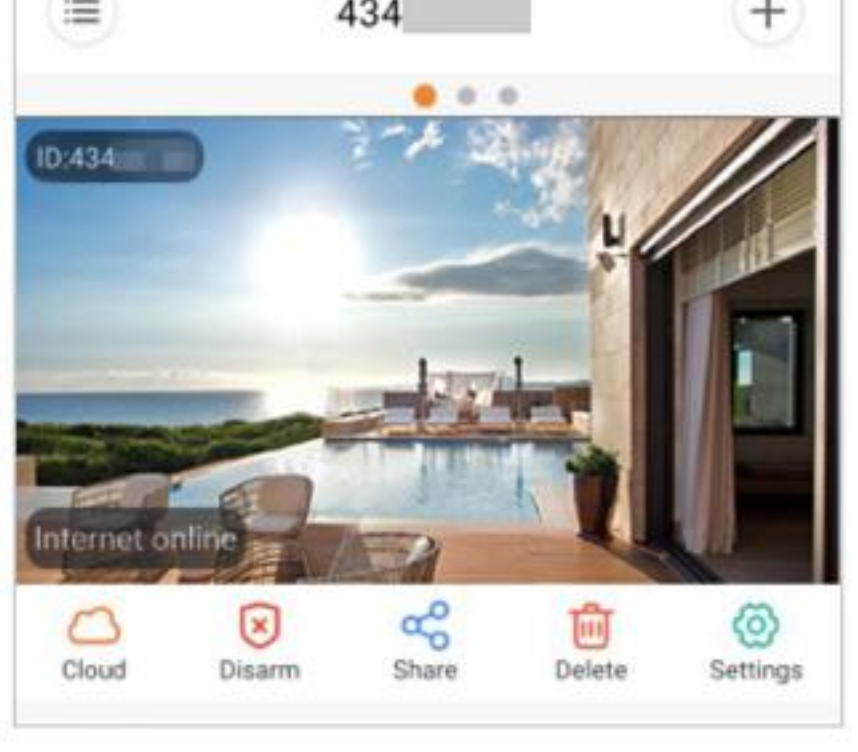


Note:


(If the connection is successful but the device is offline, exit the APP, re-enter, and refresh a few times)

V. Introduction of interface

1.Setting list

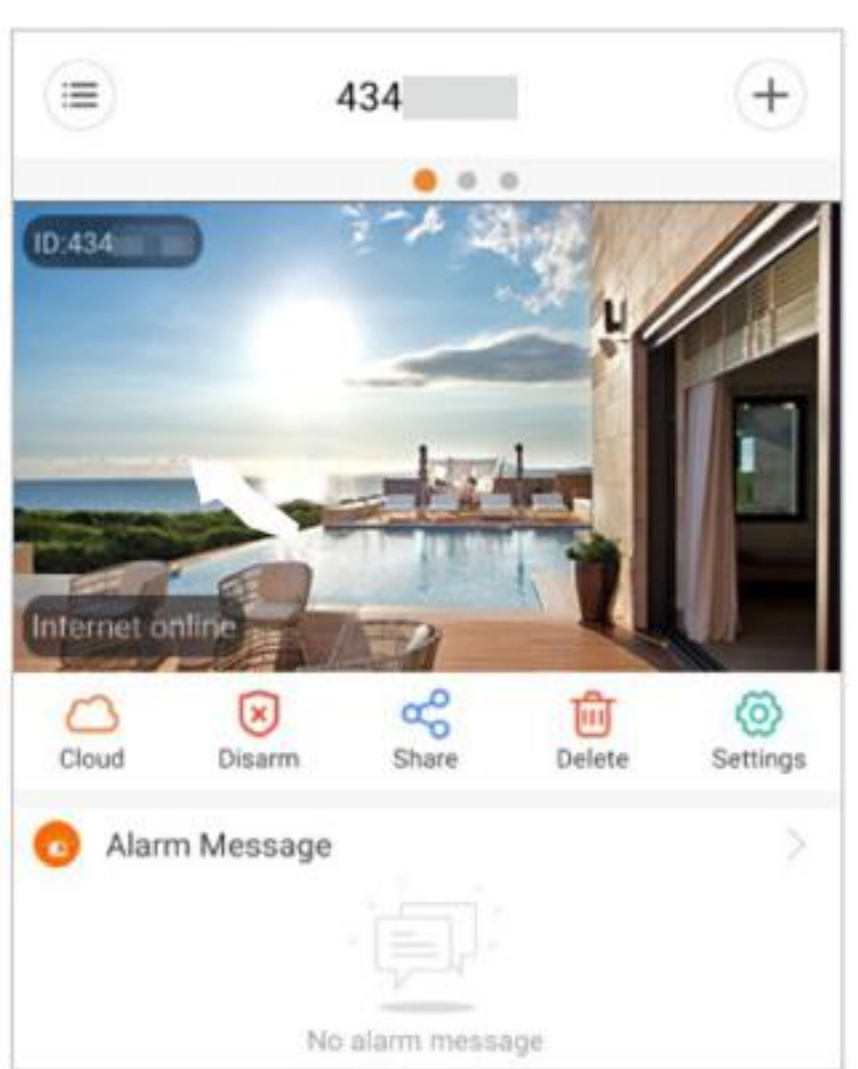


2.Real-time monitoring interface



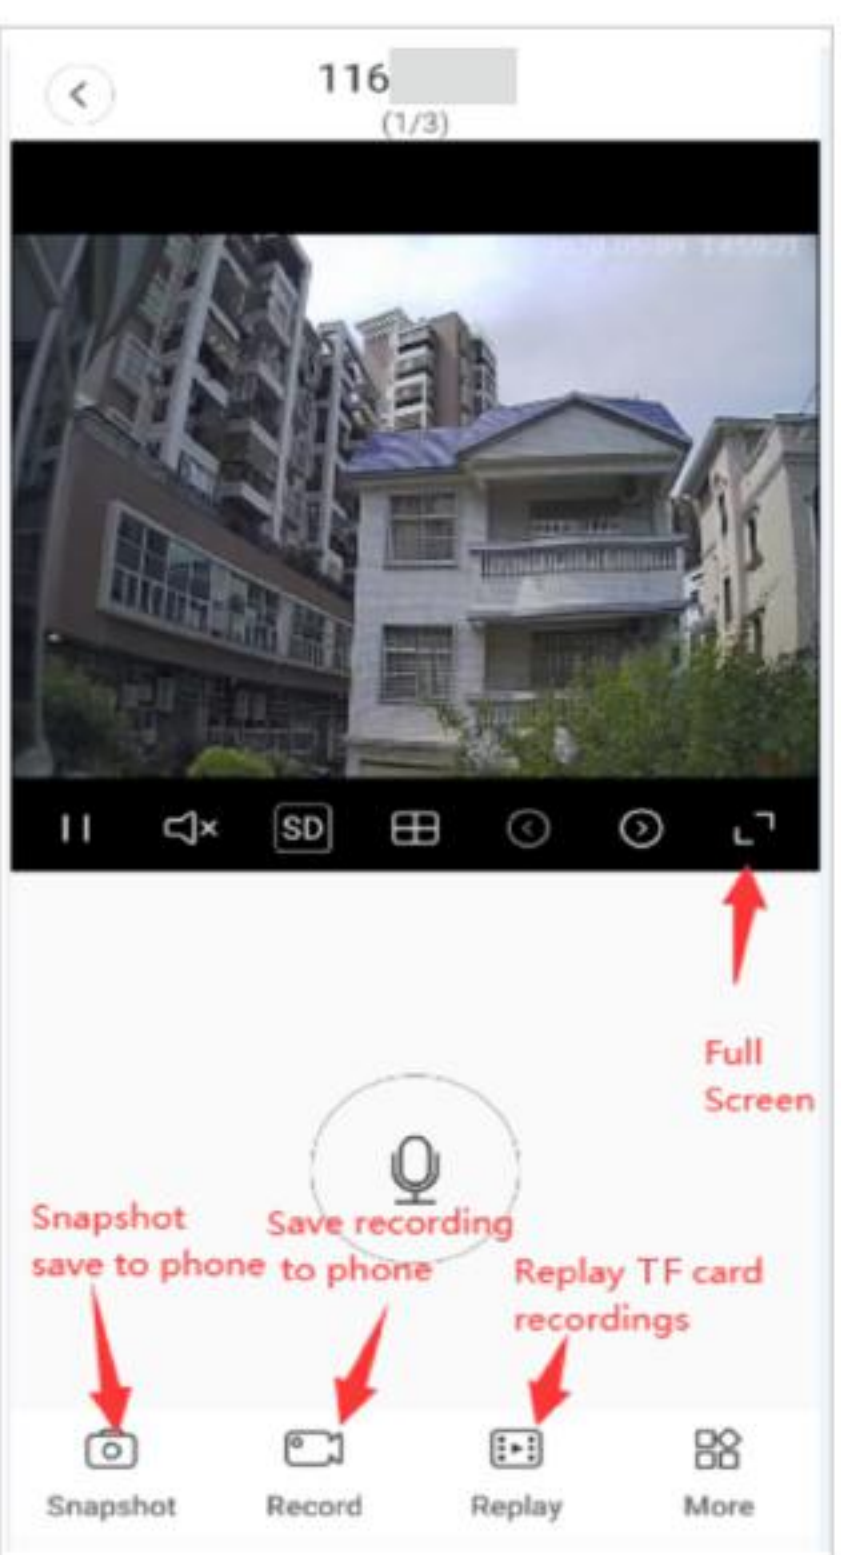


VI. Alarm:

Tap "Settings" on the APP interface to enter the "Settings" interface, and then tap "Alarm". In this interface, you can set the alarm, and select specific alarm time period and alarm area.

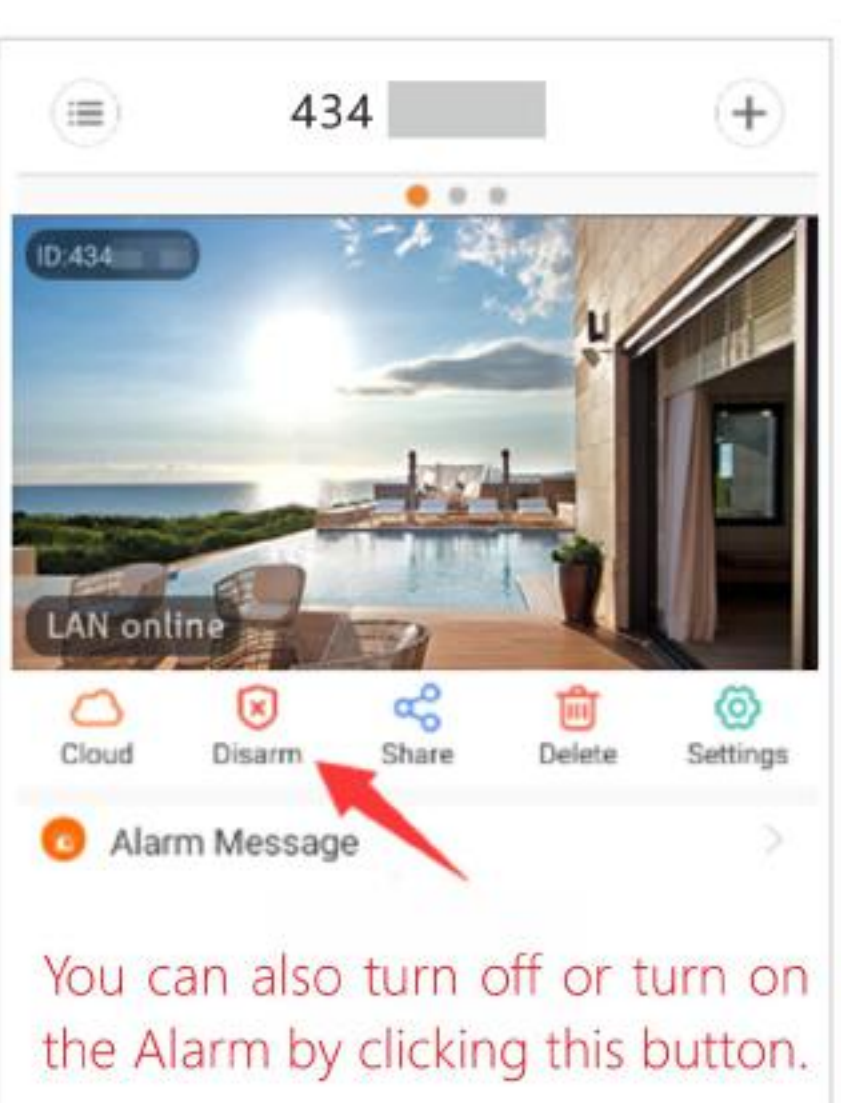





You can also turn off or turn on the Alarm by clicking this button.

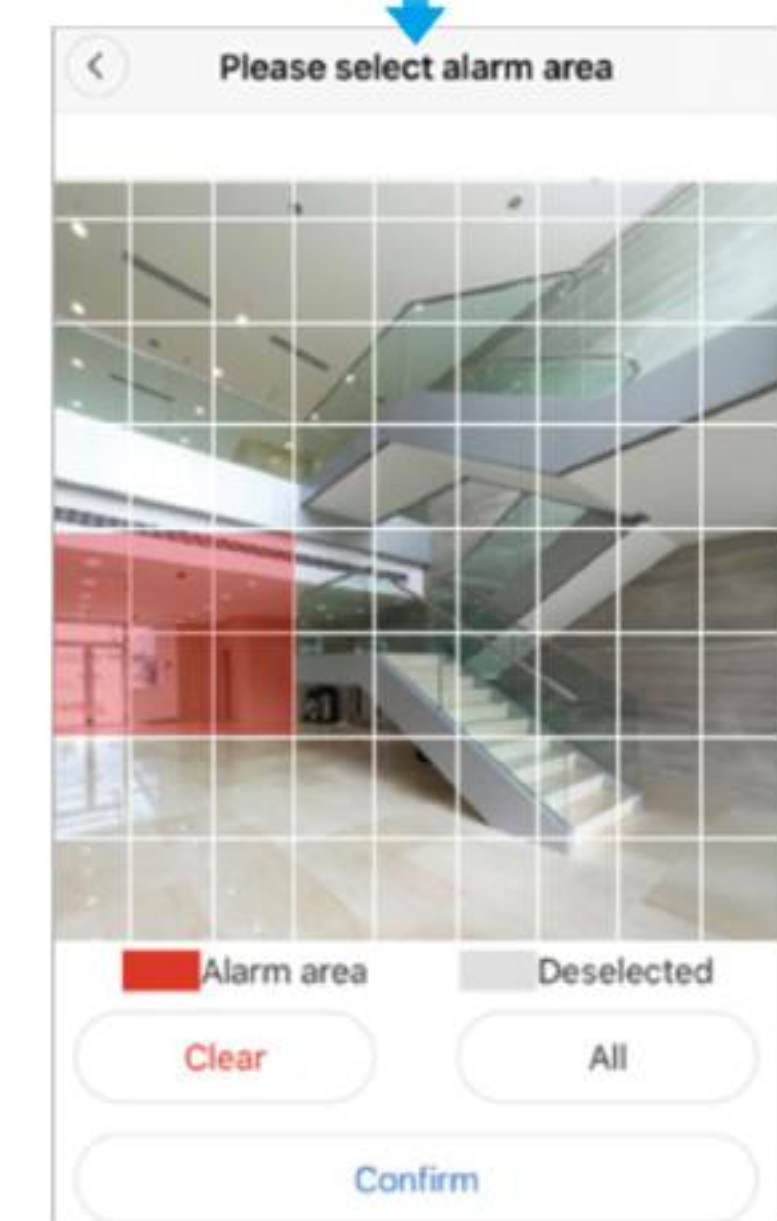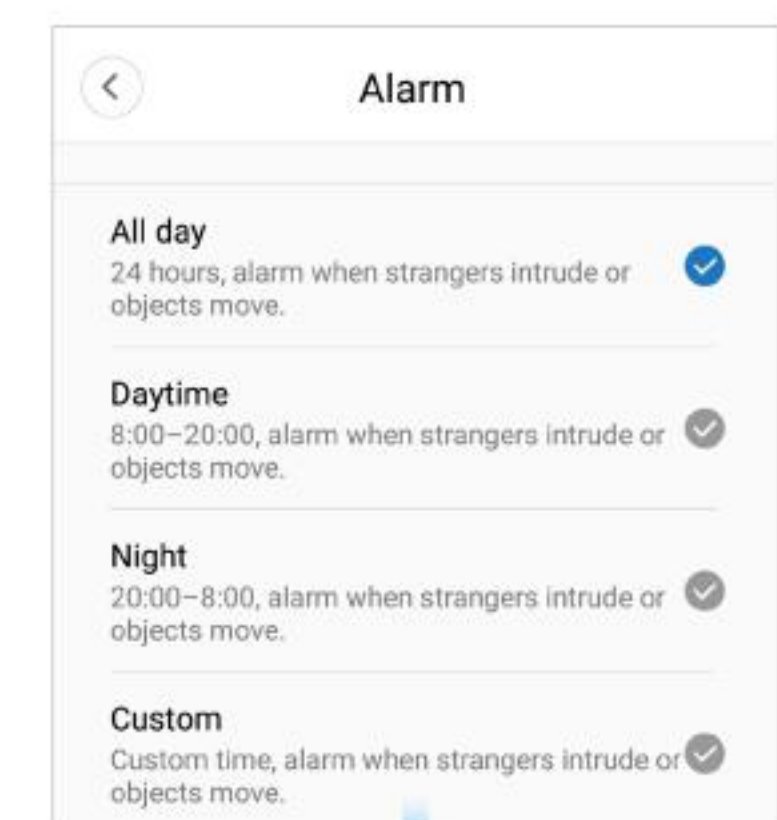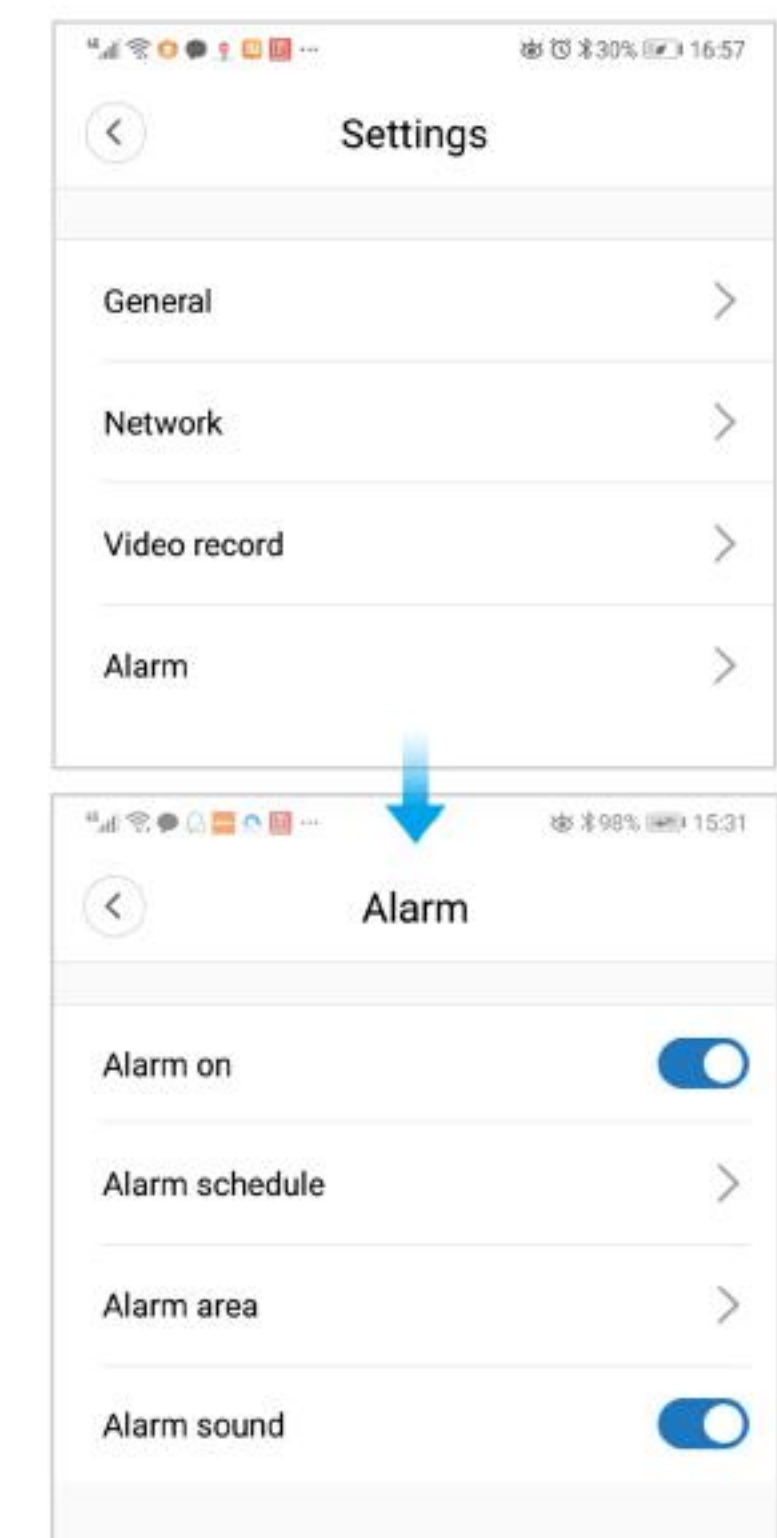


Tap to select the area to be monitored

Motion detection

1. Tap "Settings" on the APP interface to enter "Settings", and then tap "Alarm on" to turn on the alarm.

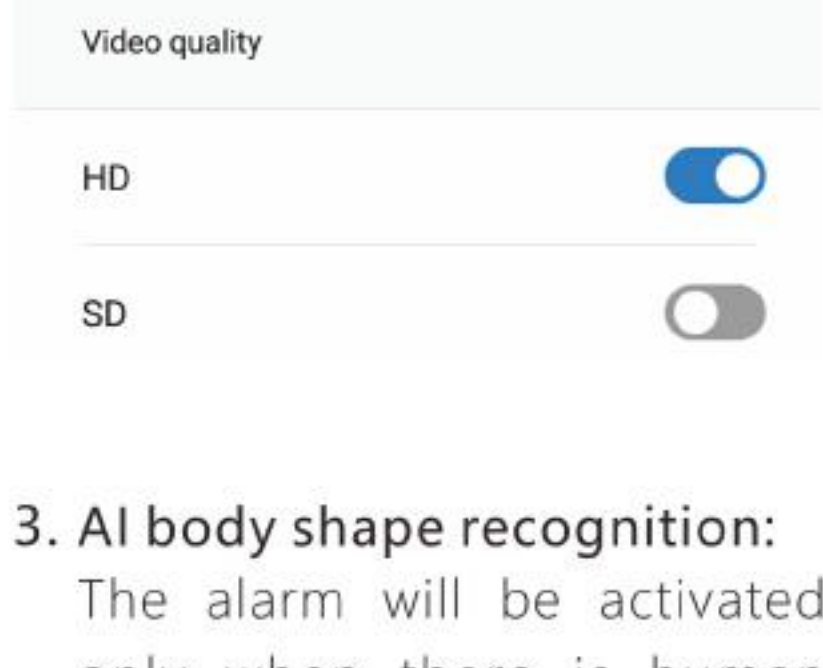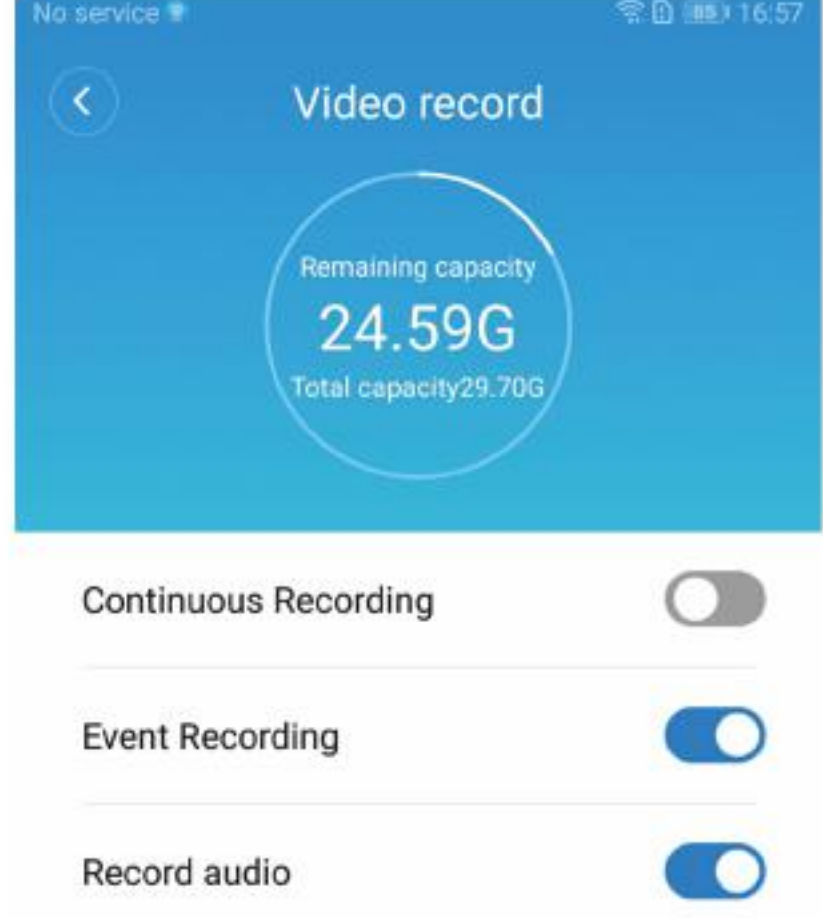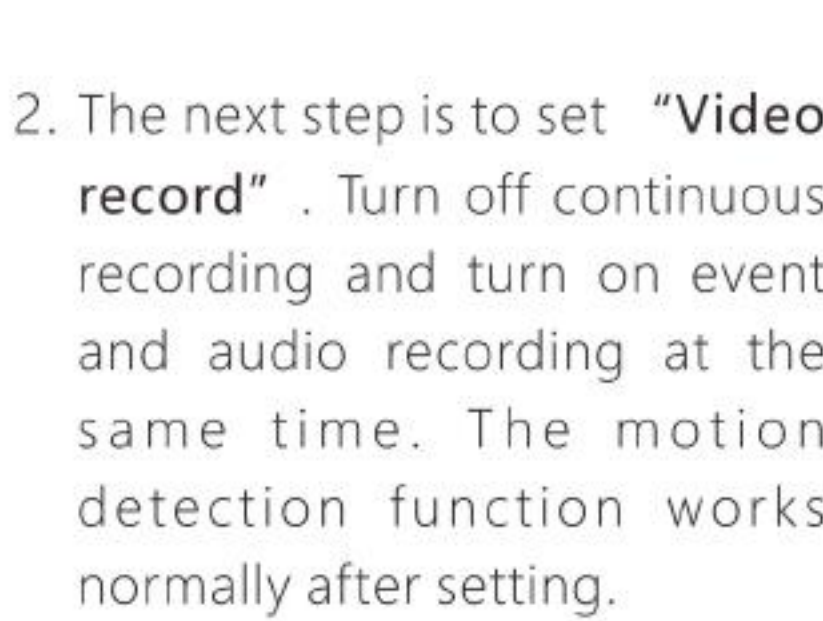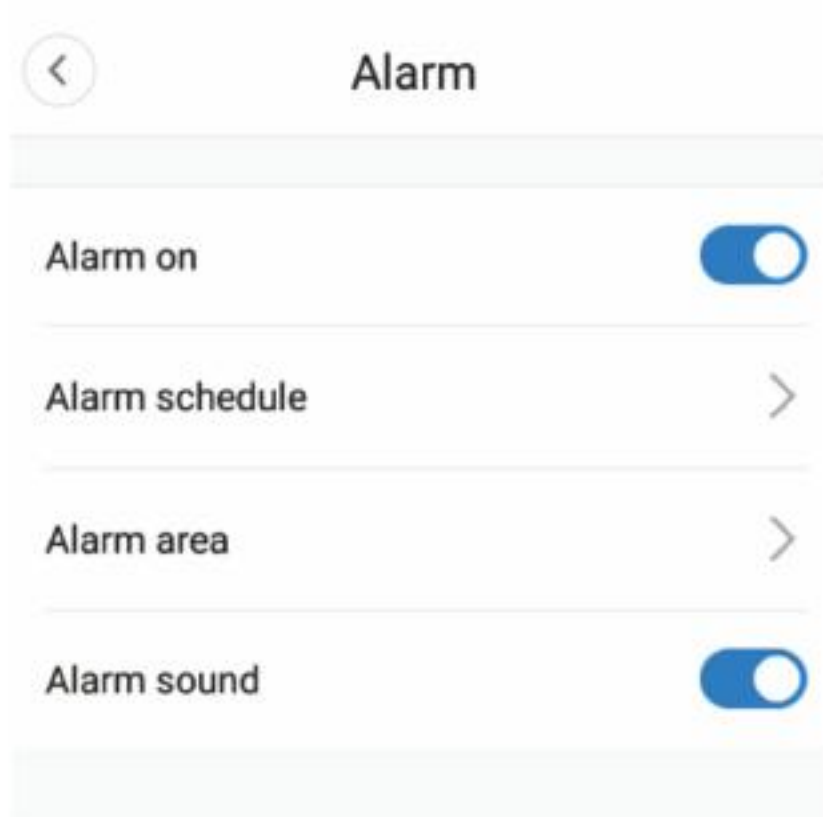

3. AI body shape recognition: The alarm will be activated only when there is human activity, so it is more accurate!

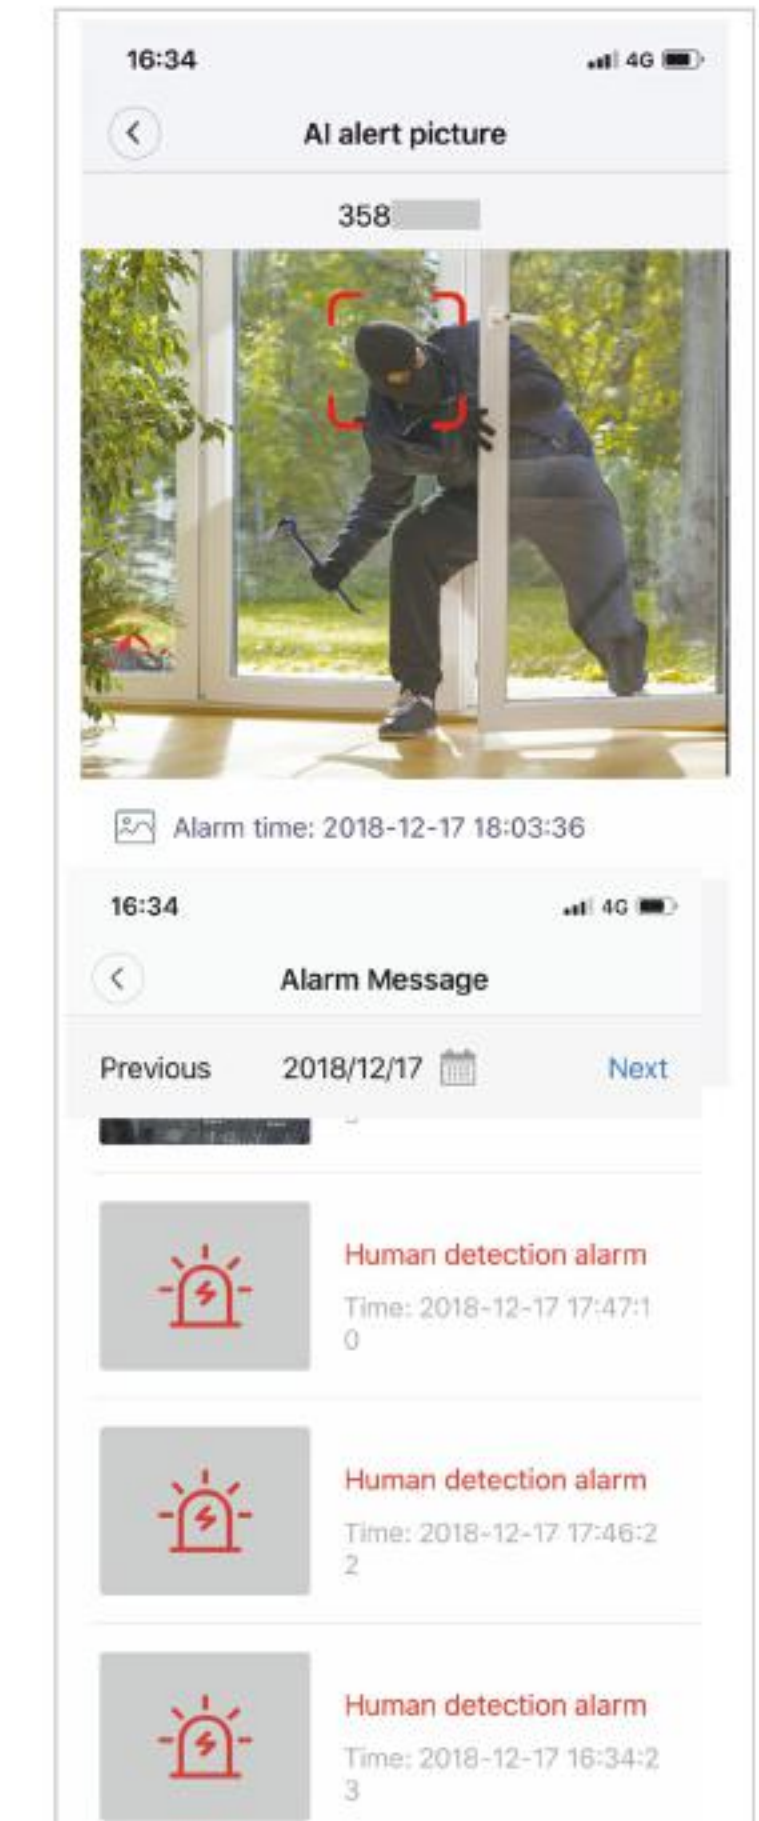

VII. Video recordings

Insert a memory card in the camera to save the surveillance video; it can be set to: alarm recording or automatic recording.

Setting method:

1. Insert the memory card. (8—128GB C10 TF card)



2. Tap on the APP: Settings - Video record, and choose Continuous recording or alarm recording mode (the mobile phone and the camera need to be connected first)




VIII.Share device


After setting remote monitoring on the device, you can send an invitation to a friend to share the camera, and the other party can use the camera together.

1. Tap the "+" symbol in the upper right corner and select "Add cameras".

2. Select "WiFi Smart Camera".

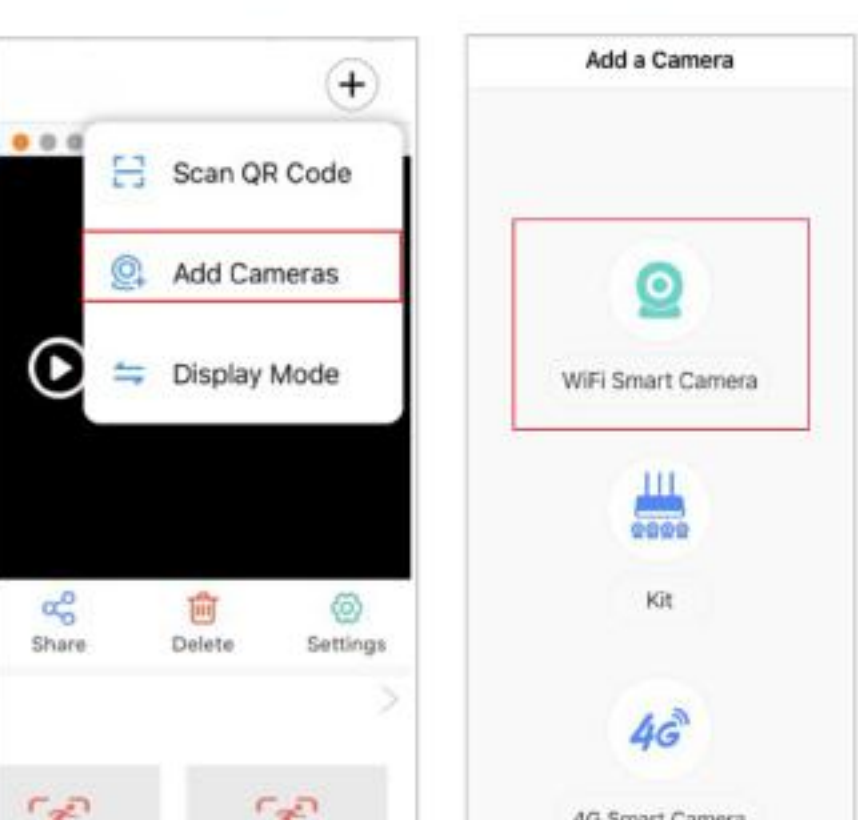


3. Tap "Network connected device".

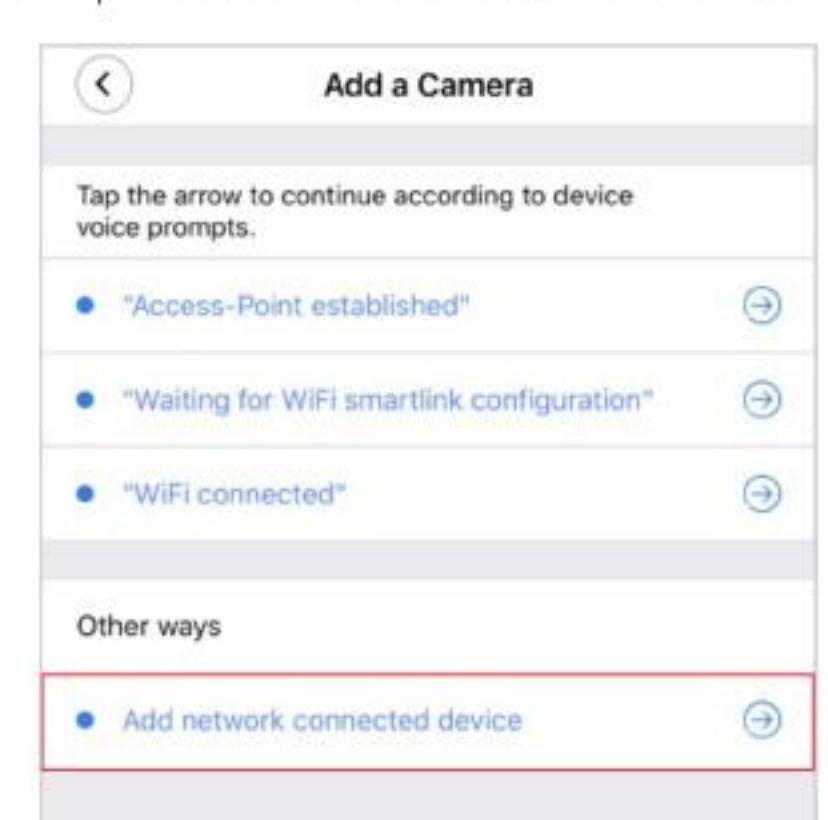

4. No need scanning the QR code, just click "Add device ID".




5. Finally, enter the device ID, user name and password.

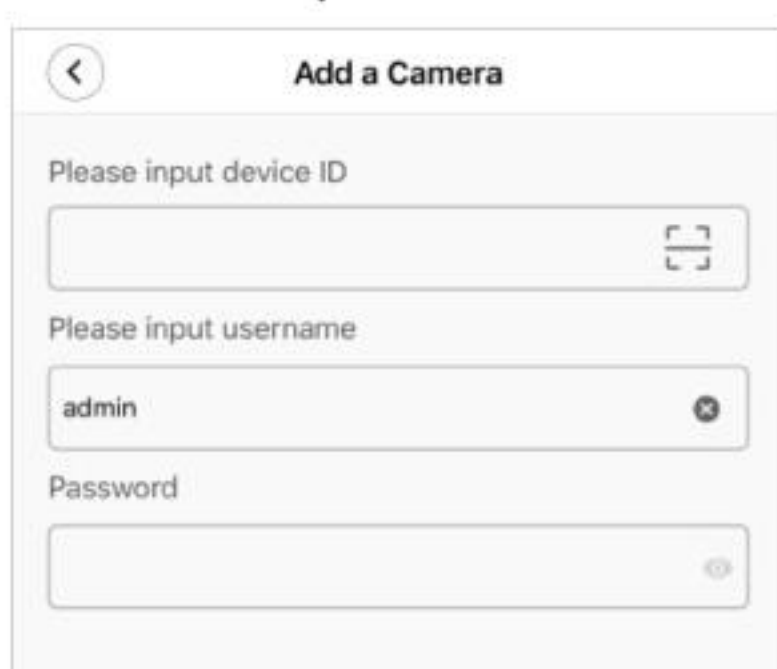

IX. Delete device

Delete the camera and no longer monitor.

X. Settings

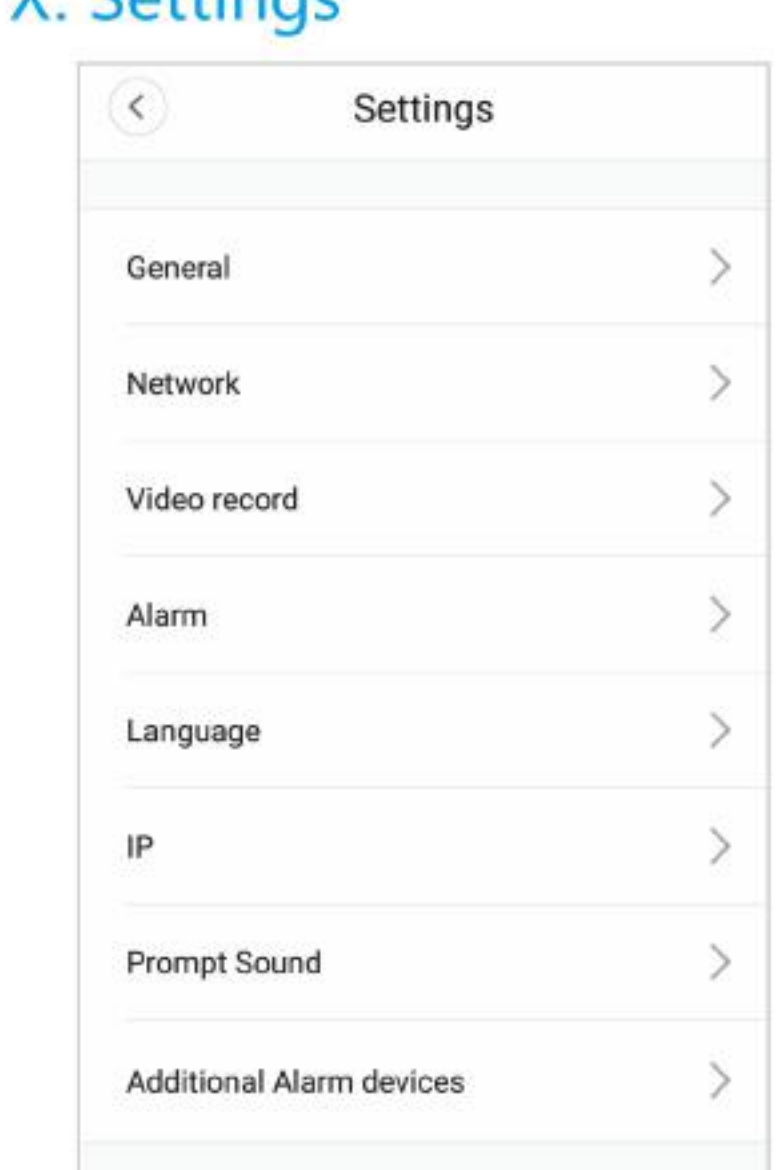

The specific settings of the device such as changing the password, recording, language, IP, etc.

XI.Resetting the camera

Insert a toothpick or a needle into the reset hole (about 5 seconds), press the button inside until the red and blue indicators turn on at the same time to complete the reset operation.



XII. FAQs

Q: Why the remote monitoring is not smooth?

A: Please ensure that the network signal at the installation location is working well and ensure the camera can receive strong and stable Wi-Fi signals.

Q: Why the video cannot be saved on the memory card?

A: It is recommended to format the memory card before use. The camera supports C10 8—128GB TF memory card.

Q: How to save the video?

A: You can save the video content on the memory card. If cloud storage is enabled, you can save the video directly to cloud storage.

Q: V380Pro account and cloud storage

A: One V380Pro account can be connected to unlimited number of cameras, but one camera only supports one cloud storage. V380Pro account can be logged in on any other mobile phones.

Q: I have set up remote monitoring. Why the APP appears offline when I go out?

A: When the network is switched or disconnected and reconnected on the mobile phone, the APP will disconnect from the camera and display offline. Please swipe down to refresh the devices in the APP or restart the APP.

Q: How to insert or remove a TF card?

A: Insert the TF card in the correct direction and push it into the slot. If you hear a click, it means the insertion is successful. To remove the TF card, push it inwards to eject and take it out.

Q: What should I do if I forget the password?

A: The only way is to reset the camera.

XIII. Relevant parameter

APP NAME	V380 Pro
VIDEO FORMAT	AVI
AP RESOLUTION	HD/SD
IP RESOLUTION	HD/SD
VIDEO	25fps ± 1fps
STORAGE	C10 TF card, 8—128GB
CHARGING VOLTAGE	DC — 5V/1A
INTERFACE TYPE	USB
FEATURES	Cloud storage and AI body shape recognition
SUPPORTED WI-FI CONNECTION	2.4G

THANK YOU!